

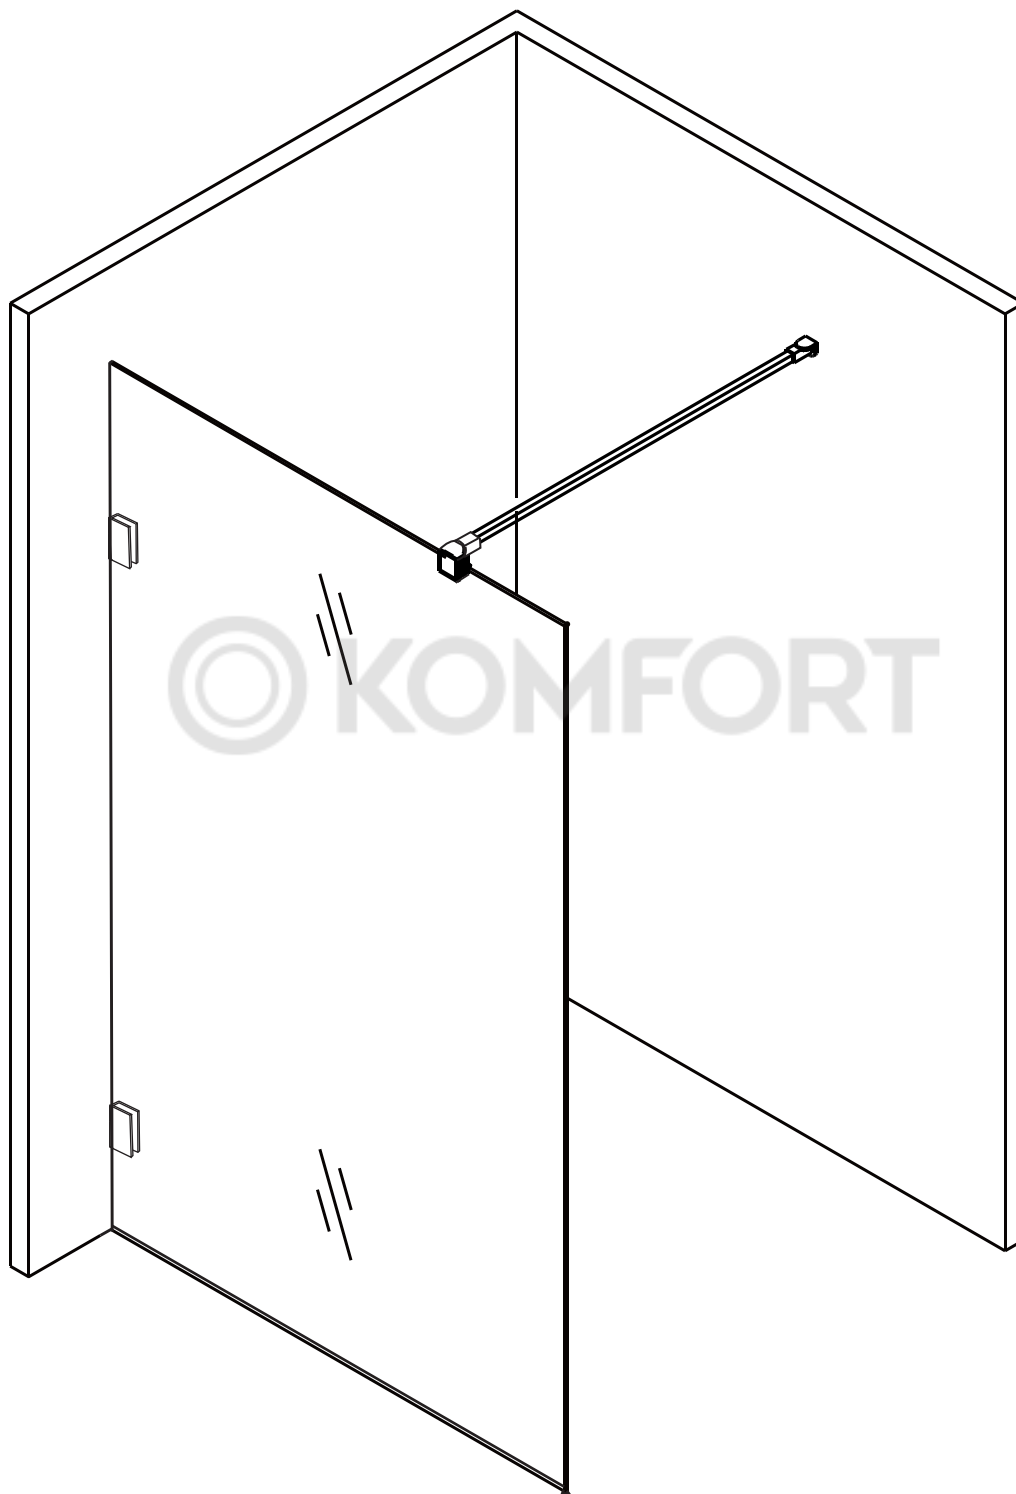
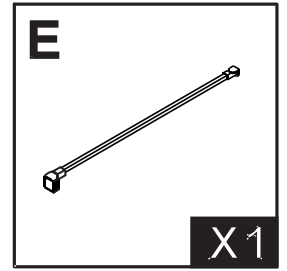
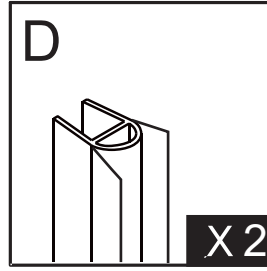
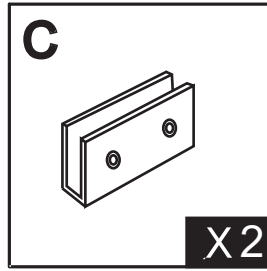


# Руководство по монтажу душевых перегородок AM.PM X-Joy

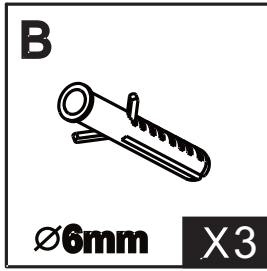

W94WI-80-200MT  
W94WI-80-200BT  
W94WI-90-200MT  
W94WI-90-200BT  
W94WI-100-200MT  
W94WI-100-200BT

W94WI-110-200MT  
W94WI-110-200BT  
W94WI-120-200MT  
W94WI-120-200BT

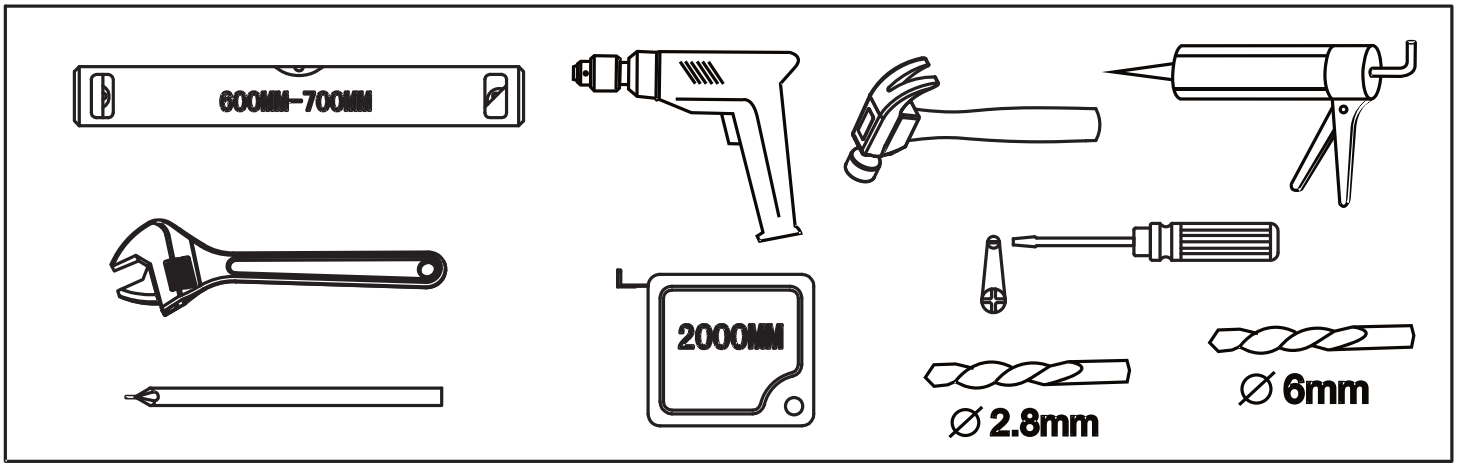

© KOMFORT

