

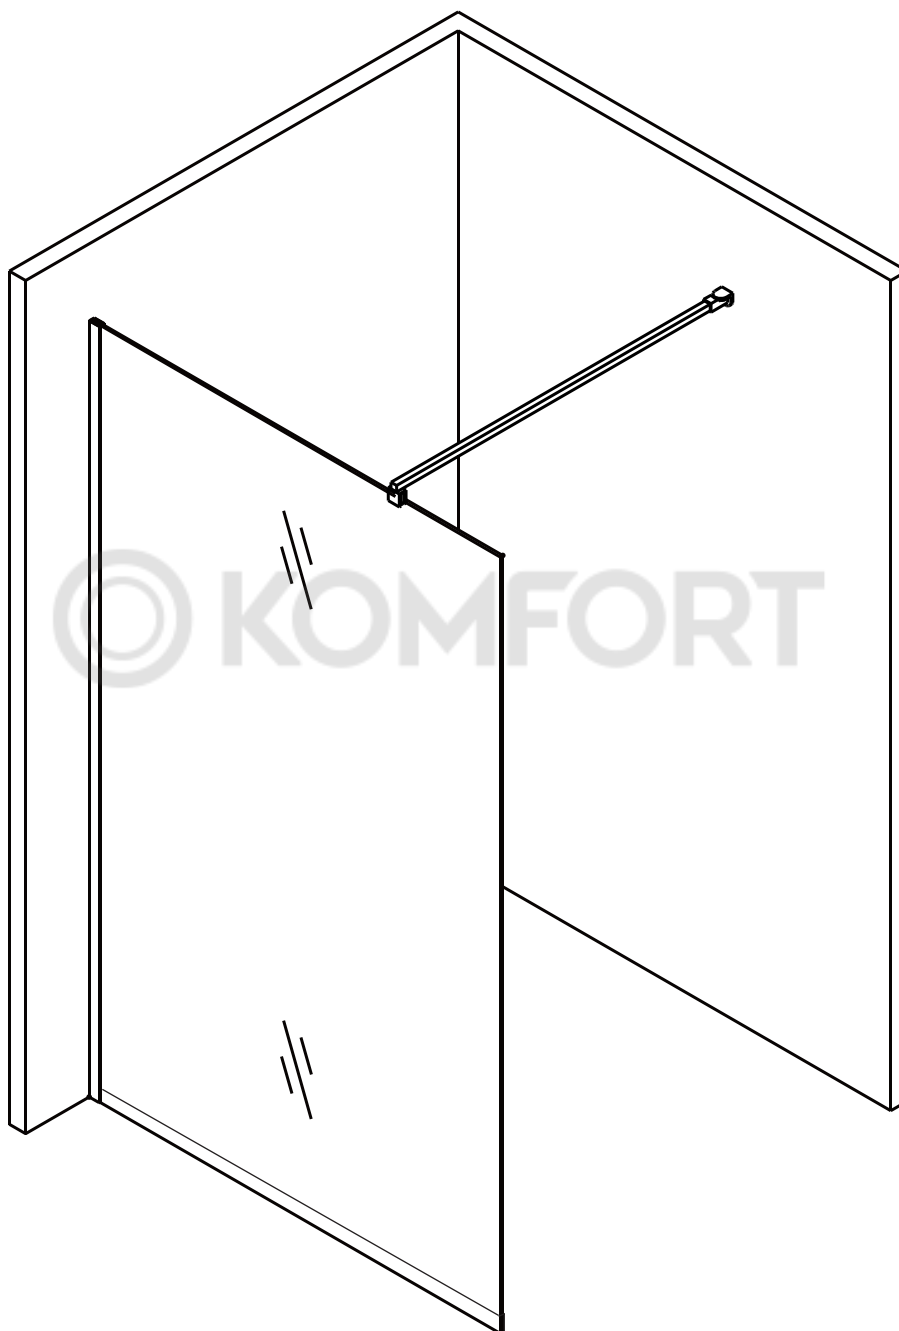
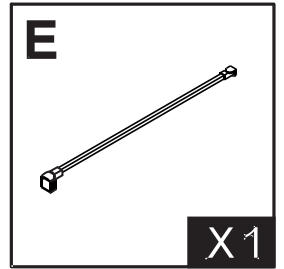
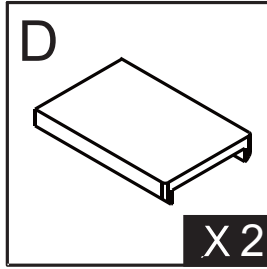
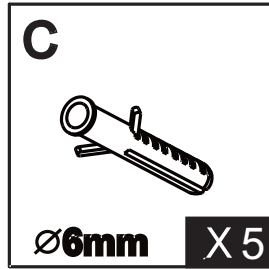
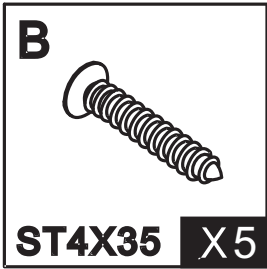


# Руководство по монтажу душевых перегородок AM.PM Func






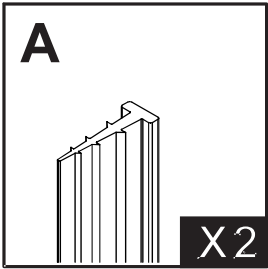


W84WI-80-200MT  
W84WI-80-200BT  
W84WI-90-200MT  
W84WI-90-200BT  
W84WI-100-200MT  
W84WI-100-200BT


W84WI-110-200MT  
W84WI-110-200BT  
W84WI-120-200MT  
W84WI-120-200BT

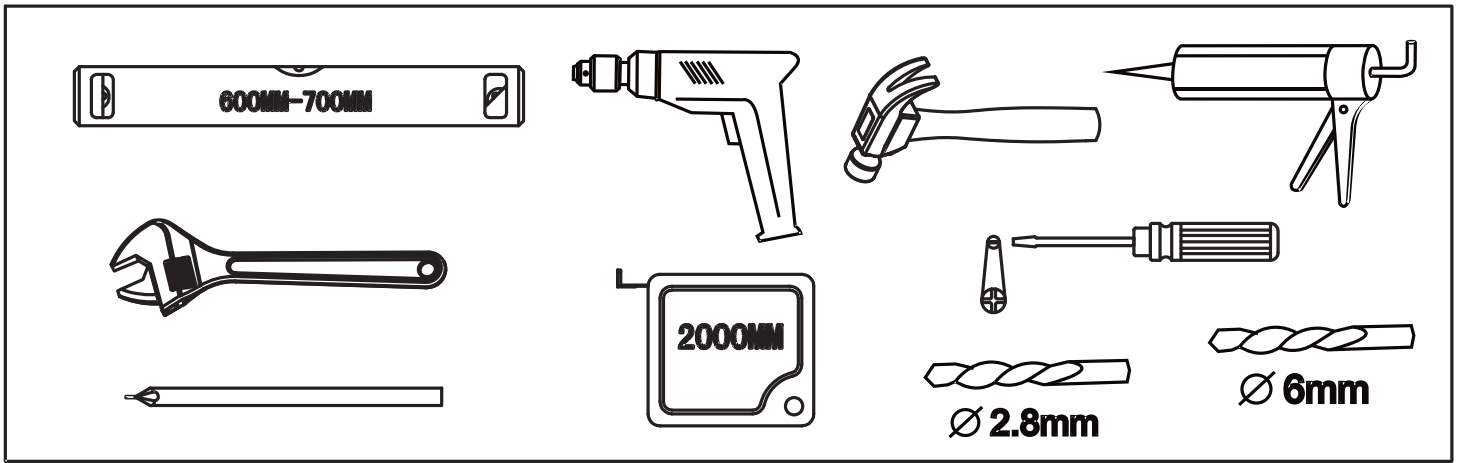

© KOMFORT

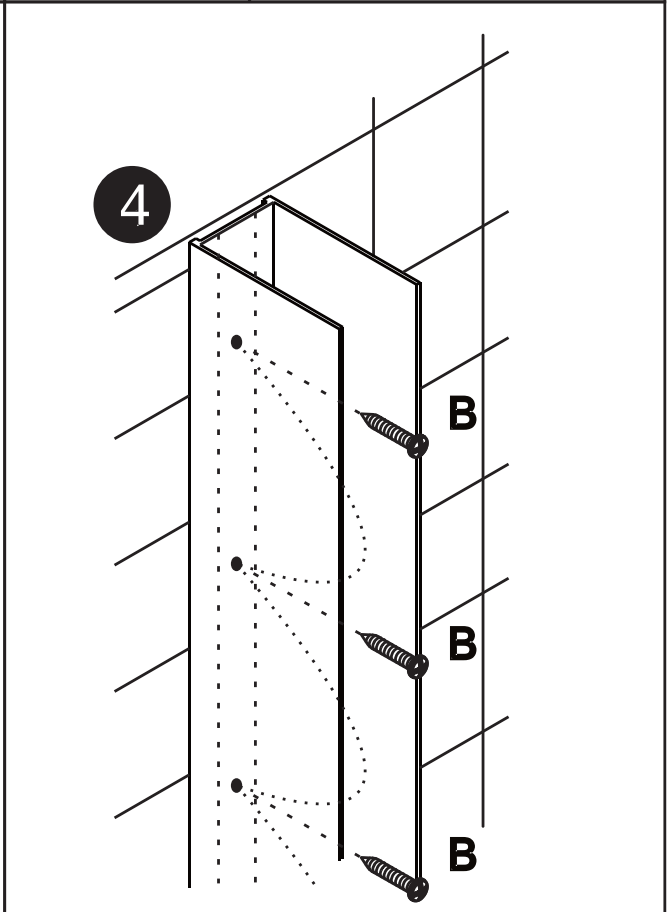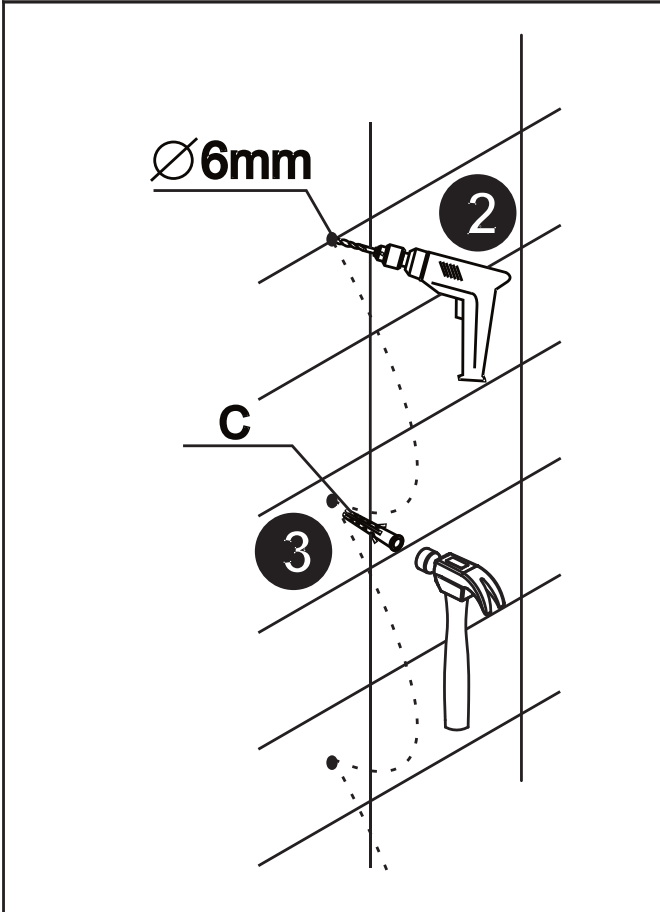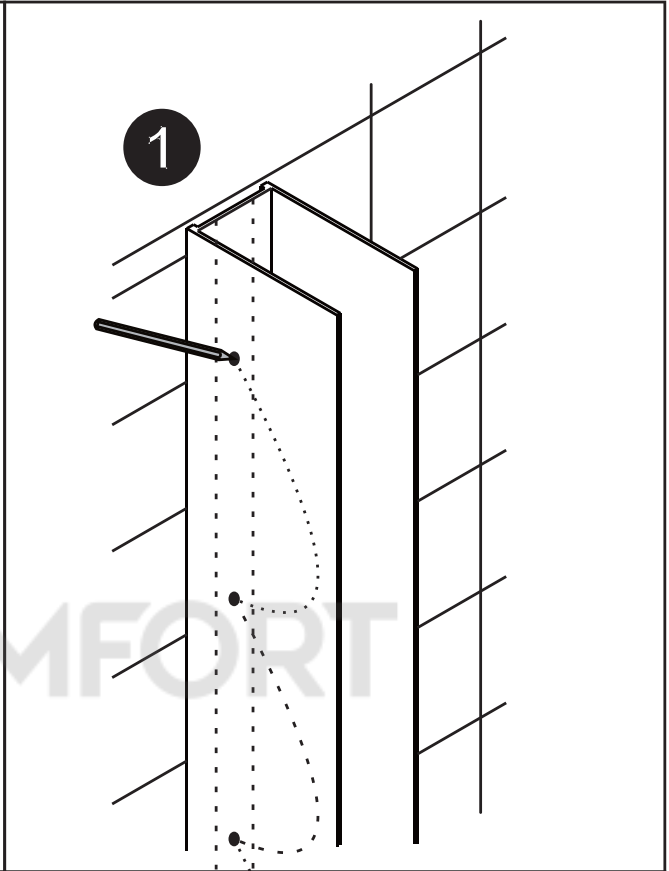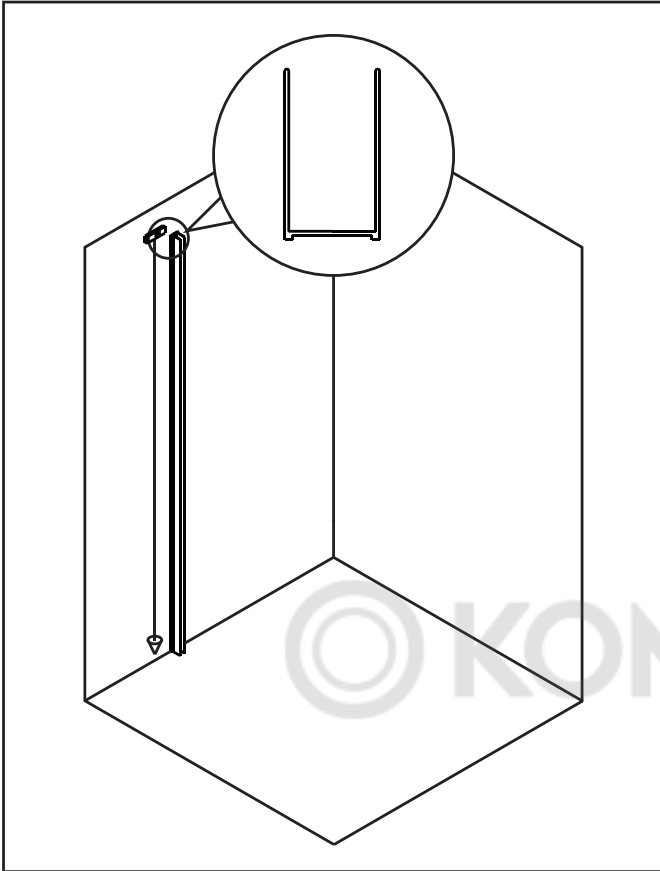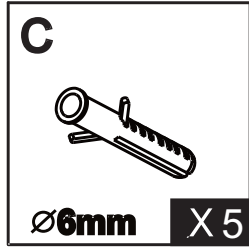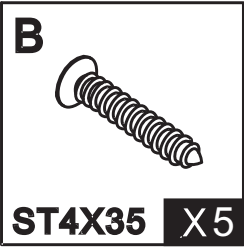

A



X2

